




# HELPFUL HINTS ON RECORDING

(FOR SUCCESSFUL RECORDING YOU MUST **UPDATE** - SEE REVERSE)

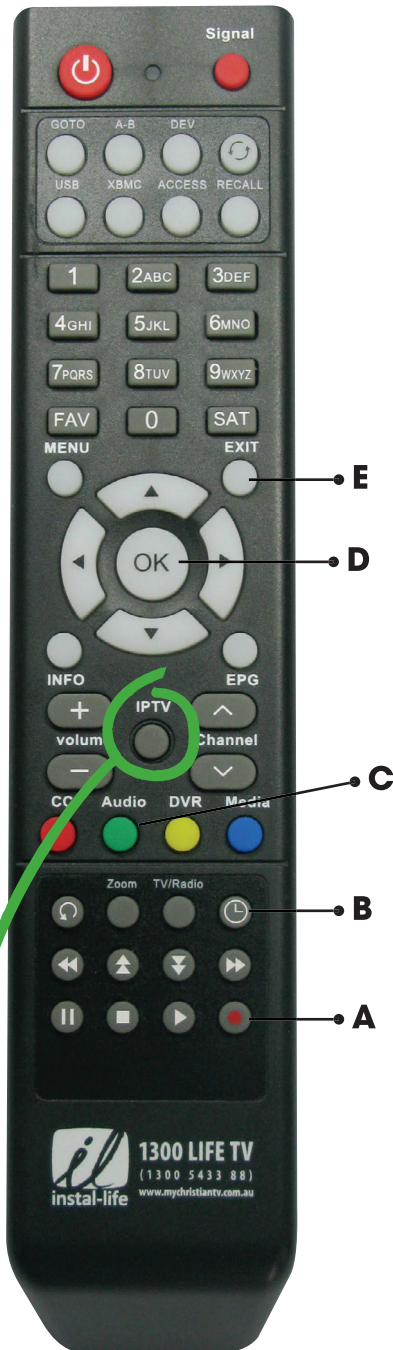

## CONNECT TO 15+ MORE CHRISTIAN CHANNELS WITH IPTV.

1. Ensure you are connected to the internet.
2. Press IPTV button and enjoy your additional channels.

### INSTRUCTIONS FOR IMMEDIATE RECORDING

- 1 Press the button with the RED DOT (**A**). (Refer to image on the left.) (Located in the bottom right corner of the remote control.)
- 2 An "Enter Recording time" window should appear.  
You should be able to see 6 digits. (The two digits on the left are for hours, the two digits in the middle are for minutes and the two digits on the right are for seconds.) These 6 digits indicate the duration of how long you would like to record for. eg. 01:30:00 means you will record for the next hour and a half.
- 3 The digit you underline is the digit you can edit.  
Use the RIGHT & LEFT ARROWS to edit different digits.
- 4 Set the duration of recording time desired by underlining the digit and pressing a number.
- 5 Press the DOWN ARROW and press OK (**D**).
- 6 To stop recording - Press Record (A) button then select STOP & press OK (**D**).

### TROUBLESHOOTING

Update your HD Box with the latest firmware available and try again. (See reverse for steps on how to update using WIFI or a USB stick that is available for purchase.)

### PLAYBACK INSTRUCTIONS (DVR)

- 1 Press the YELLOW (**DVR**) button on the remote. A list of recorded files should appear.
- 2 Use UP & DOWN ARROWS to highlight the recorded file you wish to play.  
(The screen on the right should show a review of the file you have highlighted.)
- 3 Press the OK (**D**) button to start playing the recorded file.
- 4 Press EXIT (**E**) whenever you want to go back to normal viewing.

### SCHEDULED RECORDING INSTRUCTIONS

- 1 Pick the channel you want to record on.
- 2 Press the CLOCK button (**B**) (located directly under the BLUE button on the remote). A screen titled "Schedule" should appear.
- 3 Press the GREEN (**C**) button on the remote to add a scheduled service. A screen titled "Add" written in orange will appear.
- 4 The "Mode" should be highlighted. (The "mode" indicates how often you would like to record the program, eg. daily, monthly, etc.)
- 5 Press OK (**D**) to get a full list of options. Highlight and select the option you like - using the UP and DOWN ARROWS. Press OK (**D**).
- 6 The "Start time" indicates when you would like to start recording. Press OK (**D**).  
The line under each digit should be moveable by the RIGHT & LEFT ARROWS. Underline the digit you want to edit. Use NUMBERS on the remote to achieve the desired starting time.
- 7 Highlight "Duration" (Duration indicates how long you would like to record.) Use the RIGHT & LEFT ARROWS on the remote to increase or decrease the duration by 1 minute. (The RIGHT ARROW increases the duration by 1 minute and the LEFT ARROW decreases the duration by 1 minute). Set your desired duration.
- 8 Use the DOWN ARROW to highlight "Save and Exit". (If "Schedule Reminder" window appears saying "Failed to add the recording schedule" try to make sure you are setting the starting time after the actual time showing on the digital clock (located in top right-hand corner next to the word schedule). Press OK (**D**) to confirm.  
You should be able to see that it has been added to the list of scheduled recordings.
- 9 Press the EXIT (**E**) button to go back to normal channels.

### TROUBLESHOOTING

Update your HD Box with the latest firmware available and try again. (See reverse for steps on how to update using WIFI or a USB stick that is available for purchase.)